


GREASELESS HYBRID BOTTOM FORMER TORQUE SPECIFICATIONS & MAINTENANCE


1/2" Drive Torque Wrench Required

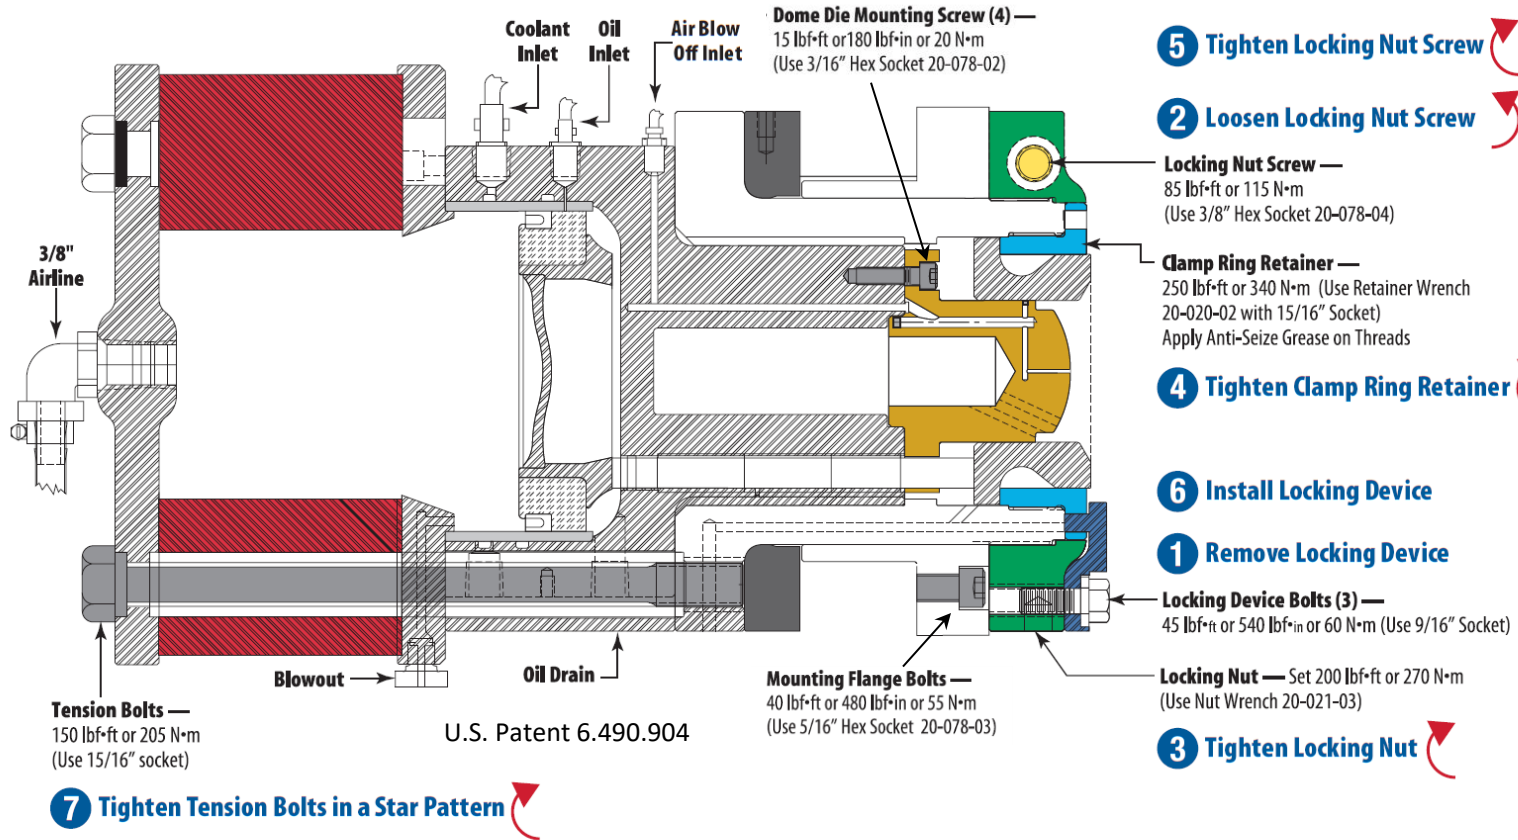


Pride Engineering recommends re-torquing each of these items in the order shown above the day after they are installed and then check at least once per month.

WEEKLY & MONTHLY MAINTENANCE

[IN ADDITION TO TORQUE MAINTENANCE]

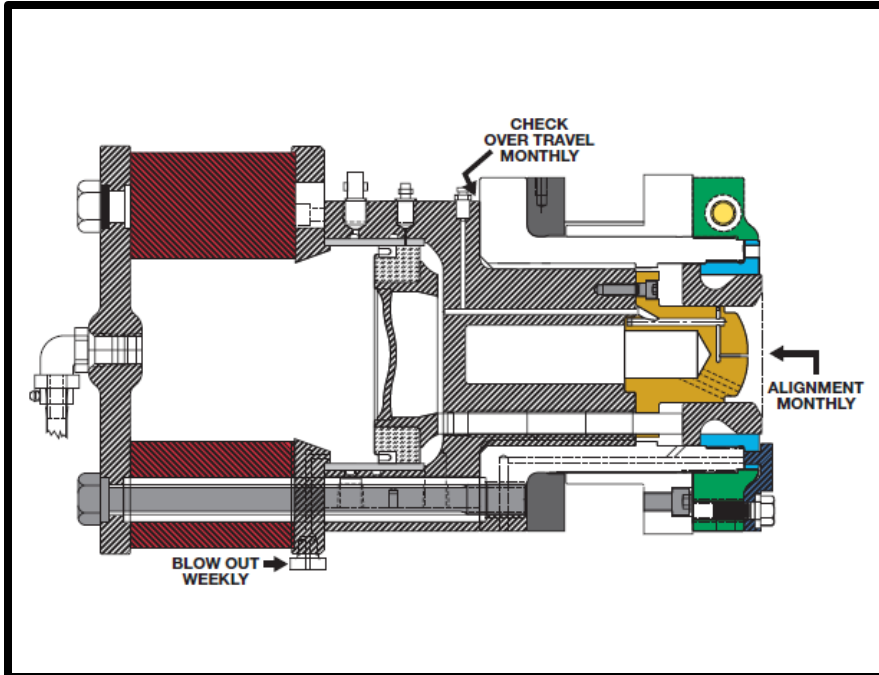

ANNUAL MAINTENANCE

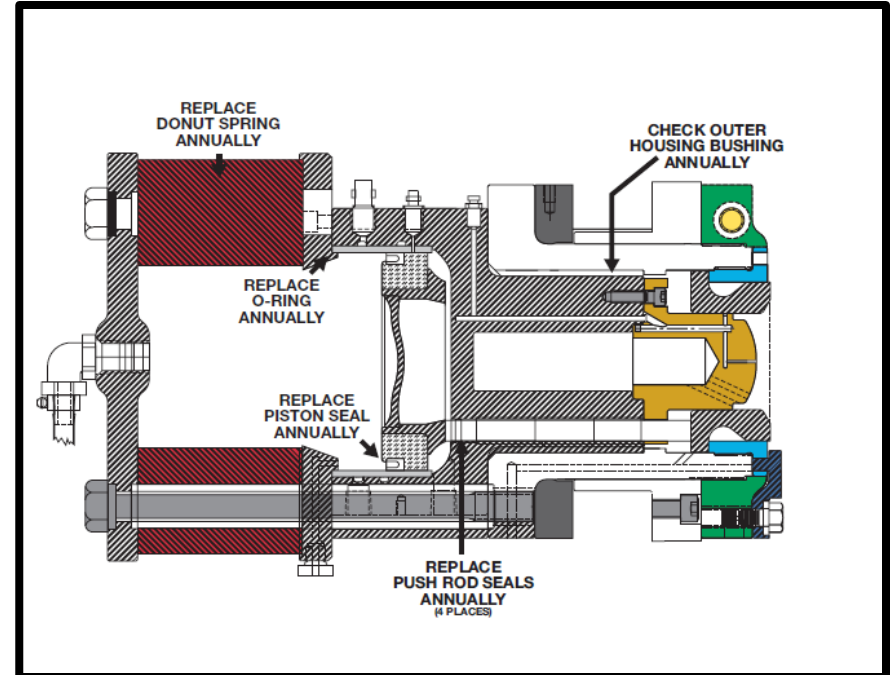

Trust TruePride® replacement parts.
E-mail: customer@pridecan.com or call
+1.763.427.6250